


For Mercedes-Benz SLK 2011-2015 with NTG 4.5/4.7


(4337) Installation Guide



1. Original Monitor(Please power off before installation)

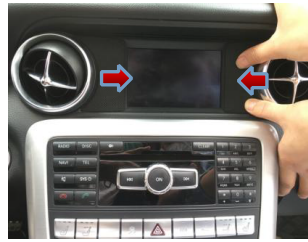

2. Slip away the display screw decorative cover

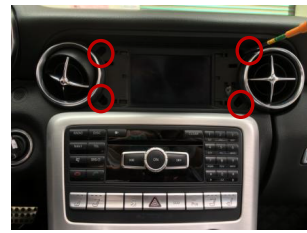

3. Remove the fixing screws




4. Open the air conditioning vent



5. Remove the display fixing screws and take out the original car display



6. Pry the decorated cover out from armrest box.

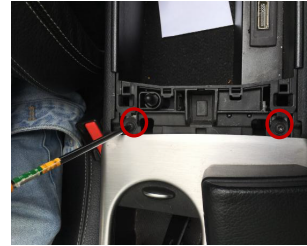

7. Remove the fixing screws



8. Pry out the decorative frame of the gear



9. Remove the fixing screws




10. Pry the central dashboard and remove it.




11. Remove the fixing screws from original host



12. Connect the optical fiber cable of the original car plug to our ISO line

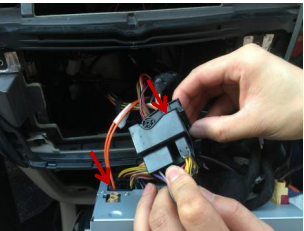


13. Connect the power cord of the original car to our ISO

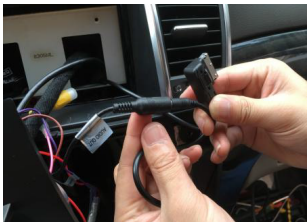

14. Connect the AMI audio cable to the headphone interface of the ISO



15. Plug the AMI audio adapter into the connector of the armrest box

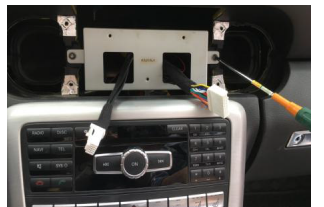


16. Assemble well the stand on original dashboard, and locked the screws, then put cables well.



17. Install the plastic base provided by our company



18. Connect the wire interface of our Android large screen machine

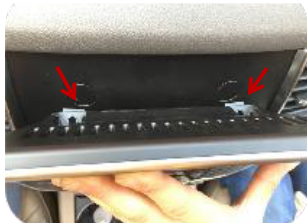

19. Install and fix our large Android screen



20. Effect picture after installation



21. Android Cables connector

1. 4G antenna Port
2. GPS antenna Port
3. RCA cable LVDS adapter
4. RCA Port
5. USB Port
6. Android Power Interface
7. 2015/2016year shared CAN interface
8. 2015/2016year short-circuited wiring interface
9. Audio USB port
10. 2015year CAN interface
11. 2016year CAN interface
12. ISO female plug
13. ISO male plug