

# Installation Guide

(Fits for X5/X6 E70/E71 2010-2013)



1. Original Monitor  
(Power off before installing).



2. Pry loose and take out the decoration strip.



3. Remove the fixed screws from original monitor.



4. Pry loose the net and take out the center speaker.




5. Remove the fixed screws.



6. Pry it and take out the panel.




7. Remove the fixed screws from the Host.

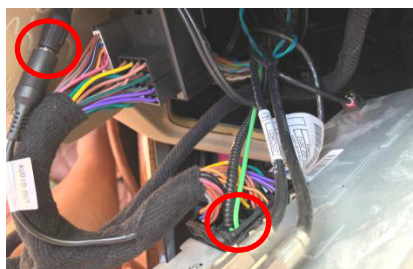

8. Pull out the original power harness and optical fiber, then plug it with Android power harness. A Note: AUX cable should connect to AUX IN in Armrest box.



9. Connect well the center speaker cable with android cable.

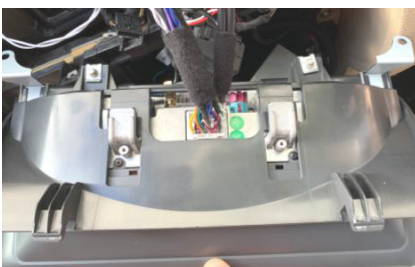

10. Plug well all the cables.



11. Effect photo after installation well.