

For C Class (W204) 2011-2014

Installation Guide



1. Original Monitor(Please power off before installation)



2. Pry out the air conditioning vent panel



3. Take out the left and right decorative cover of the panel



4. Pry the decorative strip shown in Figure



5. Pry the right decorative strip



6. Pry the top decorative strip and take it out



7. Remove the fixing screws of the original monitor



8. Loosen the fixing screws of the original HOST, and take it out.




9. Remove the power harness from original host, and connect it to android harness.



10. Connect original monitor LVDS cable with Android LVDS cable in RCA adapter



11. Assemble well the stand on original dashboard, and locked the screws, then put cables well.

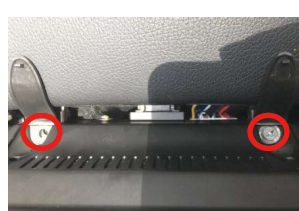

12. Assemble Android monitor to the stand, pry out the screw cover and lock the screws.



13. Effect picture after installation



14. Android Cables connector

1. 4G antenna Port
2. GPS antenna Port
3. RCA cable LVDS adapter
4. RCA Port
5. USB Port
6. Android Power Interface
7. 2015/2016year shared CAN interface
8. 2015/2016year short-circuited wiring interface
9. Audio USB port
10. 2015year CAN interface
11. 2016year CAN interface
12. ISO female plug
13. ISO male plug